











PHONE FEATURES

- Selectable menu languages in English/French/German/Spanish/Italian/Danish/Turkish
- Dynamic storage of 199 incoming calls
- 99 number phone book, each capable of storing up to 16 digits and 16 characters
- 4 (M1, M2, M3 M4) one touch memory buttons
- LCD display with 5 levels of contrast
- Pre redial function with 32 digits maximum
- 8 types of ring tones
- Hold on music
- Mute function
- Ringer volume adjustable to 4 levels
- 3 AA-batteries






OPERATION SETTING

Setting a function at the on hook or off hook state. Press the  or [SET/STORE] button to enter setup mode. The LCD will display VIEW MENU __. Press the  or  button to choose an item to set. The LCD will display the configurable items. Press the  button to set this item. To save a setting press the  button and move along to the next item. If an error is made entering a digit, the  button can be used to correct the mistake. Please see below for the configurable items and their setting details:







CHOOSE LANGUAGE

When the LCD displays SELECT LANGUAGE press the  button to enter the preferred language. The LCD will display the default language, ENGLISH. Press the  or  button to choose your language. There are a total of seven languages available. ENGLISH / FRANCAIS / ESPANOL / ITALIANO / DEUTSCH / TURKISH / DANMARK. When you are finished entering the preferred language, confirm and save it by pressing the  button.

AREA CODE






When the LCD displays SET AREA CODE press the  button to enter the default area code. The LCD will display „- - - - -“ with first „-“ flashing. If an area code has been set, it will display the previously entered code and the first digit will flash. Press the  or  button to set or revise the area code from „0“ to „9“, then press the  button to confirm and go on set second flashing digit. When you are finished entering the preferred area code, confirm and save it by pressing the  button.

SET LONG DISTANCE CODE





When the LCD displays LONG DIST ACCESS press the  button to enter the default long distance code. The LCD will display „- - - - -“ with a flashing first „-“. If a long distance code has been set previously, the first digit will flash instead of „-“. Press the  or  button to set or revise the first digit from „0“ to „9“. Then press the  button to confirm. Next, edit the second digit in a similar manner. Confirm with the  button if entry is correct. Continue the same way with the remaining „-“. When you are finished entering the long distance code, confirm and save it by pressing the  button.

Note: The „callback“- function requires the set-up of „long distance code“.






SET DATE AND TIME

When the LCD displays DATE/TIME press the  button to enter the date and time. Use the  or  buttons to select the appropriate digit. Confirm and save each digit with the  button. The day of the week will be recognized automatically. When you are finished entering the date and time, confirm and save it by pressing the  button.





SET LCD BRIGHTNESS

When the LCD displays CONTRAST ADJUST, press the  button to enter the desired brightness level. The factory default setting is level 3. Press the  or  buttons to adjust the brightness. There are a total of five levels with 5 being the brightest. When you are finished entering default brightness level, confirm and save it by pressing the  button.







SET BABY CALL

This child safety function allows a young child to place a call without entering a number. More details are available in the next section. When the LCD displays BABY CALL, press the  button to enter the desired setting, ON or OFF. The factory default setting is OFF. Press the  or  button to choose ON or OFF. Press the  button to confirm. The LCD will then display BABY CALL NUMBER. Input the desired BABY CALL number and press the  button to confirm and save the setting.








SET RINGERS

When the LCD displays RING MELODY, press the  button to enter the desired ring melody. The default setting is RING MELODY 1. Press the  or  button to choose your favorite ring melody. There are a total of 8 melodies to choose from. When you are finished entering the ring melody, confirm and save it by pressing the  button.

PHONE BOOK INPUT

When the LCD displays PHONEBOOK INPUT, press the  button to enter the phone book input function. Input a number and press the  button for to save and confirm. Next, enter the desired name by using the  or  or  buttons, then press the  button to confirm and save information.

EDITING PHONE BOOK

When the LCD displays PHONEBOOK EDIT, press the  button to edit the phone book. Input first letter of the name which you want to edit, press the  button or you may press the  button directly and to view the next name in sequence. Use  or  buttons to move the cursor and the  button to edit. When you are finished entering the phone book, confirm and save the changes by pressing the  button.

OPERATIONS AT ON HOOK STATE

RECEIVING A INCOMING CALL

When receiving an incoming phone call, the LCD will display the phone number together with the name, date, time and number of calls.



A new number will be identified by the „NEW“ icon, and a duplicated number will be identified by the „REP“ icon.


A private call (when the caller prefers his/her number to be hidden) will be displayed as „PRIVATE CALL“.

A call out of the service area will be displayed as „OUT OF AREA“.

An incorrect incoming signal will display „ERROR“.


REVIEWING INCOMING CALL

Press the  or  button to review the incoming call number, date and time etc.

To review quickly, press  or  button and hold it for more than 4 second.



CALL BACK INCOMING NUMBER

To call back a local number, press the  or the  button.


To call back a long distance number, press the  button twice. The long distance code will be add before the area code.


REVIEWING / DIALING OUT – OUTGOING CALL



Press the [OUT] button to view the outgoing numbers and duration of each call.

To dial out, press the  or the  button. To review quickly, press and hold the [OUT] button for 4 seconds.




PHONE BOOK REVIEWING

Press the  button. The LCD will prompt for the input of the word which you want to review. Input the first name to review.

Press the  key directly without inputting the first word of the name to review the names and numbers one by one.

To dial the number, press the  button or the  button.

PRE-DIAL A NUMBER

At the on hook state, input a telephone number, if an incorrect digit is entered, press the  button to edit. Press the  button or the  button to dial the number.

'DEL' KEY FUNCTION

At the on hook state and in setup mode, use it to correct any input mistakes or to exit the setting mode.

In the Pre-dialing mode, use it to correct any input mistakes.


When scrolling through incoming calls, press it to delete a single phone number. By pressing and holding it for 4 seconds all incoming calls will be delete.

When scrolling through outgoing calls, press it to delete a single phone number.

When scrolling through the phone book, press it to delete a record.


BABY CALL FUNCTION

This child safety function allows a young child to place a call without entering a number.

The previously entered baby call number will be dial when the BABY CALL function is active. To place a call, the child can press any button except the  button or simply pick up handset.

PHONE NUMBER STORE

One touch memory (M1, M2, M3, M4)

Store: At the on hook state, input pre-dialing number +  + [Mi] (i=1-4)


Display: At on hook state + [Mi] (i=1-4)

Store incoming number in one touch memory




Store: At on hook state + incoming number +  + [Mi] (i=1-4)

Display: At on hook state+ [Mi] (i=1-4_

Dial one touch memory









Pick up handset or press the  button + [Mi] (i=1-4)

STORE INCOMING NUMBER IN PHONE BOOK

Store: incoming number +  + PHONE BOOK + edit the name and press  same operation as edit phonebook). If you not need to edit a name then press the  button directly.


Dial: scroll the number + callback

FILTER FUNCTION



Call filtering does not allow entered numbers to ring on the phone. At the on hook state, press the  button, it will display FILTER START, then input filter time. Press the  or  button to set the hour and press the  button. Press the  or  button to set the minute, then press the  button. To set the finish time the LCD will display FILTER STOP, use same method to set filter finish time. Now the LCD will display FILTER. When a call is coming in, within the filter span, the LCD will display the incoming number but the phone will not ring. Press the  button to close filter function and FILTER will disappear.

OPERATIONS AT OFF HOOK STATE





MUTE FUNCTION

Press the mute button to mute a call so that the person on the other end will not hear what you are saying. You will continue to here the person on the other end. To release mute press the  button again to continue the conversation.



Check incoming and outgoing number

At the off hook state, press the  or  button to check incoming number. At off hook state press the [OUT] button to check the outgoing number.

SCROLL PHONEBOOK

At the off/on hook state, you may check the phonebook list by pressing the  or  button. If you would like to dial the selected number, press the  button instead of .


AUTO REDIAL

At the off hook state and when dialing a number, put down handset and press the [Hold/ABR] button to enter auto redial mode. When you here the phone ringing you may pick up handset or press the  button to enter speaking mode. If the number is redialed seven times without a connection, picking up handset or pressing the  button, it will switch to the off hook state automatically. In the process of auto redial, press any button to exit .


HOLD ON MUSIC

At the off hook state press the  button. To enter the hold on music state put down the handset

To deactivate hold on music, simply pick up the handset. Hold on music will stop and normal handset mode will resume

Another option is to press the  button again. Hold on music will stop and hands free mode will be entered

Operations at off hook state

Press the  button. Hold on music will stop and hands free mode will be entered

CALL TIME FUNCTION

The LCD display shows the duration of the current call in progress. Manual control is not available.

RINGER VOLUME

At the on hook state, press the [VOL] button to adjust the ringer volume. The default setting is Max,. There are 4 levels available.

P-T SWITCH

Choose „P“ or „T“ according to different exchanger. „P“ stands for pulse and „T“ stands for tone. The default setting is tone mode.

Note: The power adapter is available only for european countries (220 Volt).

Please install batteries!

